



## Audio System (without navigation system)

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

### n Basic operation



- 1 Sound quality modes
- 2 Listening position (if equipped)
- 3 Automatic Sound Levelizer (ASL)
- 4 Audio sources
- 5 Power/Volume

### n Audio sources

"AM·SAT": AM radio/Satellite Radio\*

"FM": FM radio

"DISC·AUX": CD player/Auxiliary audio device

\*: The optional Lexus genuine satellite tuner and antenna allows you to receive and play XM<sup>®</sup> Satellite Radio broadcasts. (Subscription is required. For detailed information, see the Owner's Manual.)

### n Radio



- 1 Traffic information
- 2 Station presets
- 3 Text messages
- 4 Radio tuner
- 5 RDS genre select
- 6 Scan
  - All radio stations: press
  - Preset radio stations: press and hold
- 7 Seek

### n Entering station presets

- 1 Select the desired station by using the tune, seek or scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep indicating that the station is set.

## n CD player

### n Playing an audio CD



- 1** Random playback  
Current CD: press  
All CDs: press and hold
- 2** Repeat  
Current track: press  
Current CD: press and hold
- 3** Text information
- 4** CD select
- 5** CD load
- 6** Scan  
All tracks in current disc: press  
First track of each disc: press and hold
- 7** Eject
- 8** Track select/fast forward/rewind

### n Playing a CD with MP3/WMA files



- 1** Random playback  
Current file: press  
All files in current folder: press and hold
- 2** Repeat  
Current file: press  
All files in current folder: press and hold
- 3** Folder select
- 4** Text information
- 5** File select
- 6** CD select
- 7** CD load
- 8** Scan  
All files in current folder: press  
First file of each folder: press and hold
- 9** Eject



## **n Loading a CD**

- 1** Press the "LOAD" button.  
"WAIT" is shown on the display.
- 2** Insert a CD when the indicators on the slot turn from amber to green.  
The display changes from "WAIT" to "LOAD".

## **n Loading multiple CDs**

- 1** Press and hold the "LOAD" button until you hear a beep.  
"WAIT" is shown on the display.
- 2** Insert a CD when the indicators on the slot turn from amber to green.  
The display changes from "WAIT" to "LOAD".  
The indicators on the slot turn to amber when the CD is inserted.
- 3** Insert the next CD when the indicators on the slot turn from amber to green again.  
Repeat the procedure for the remaining CDs.  
To stop the operation, press the "DISC·AUX" button.

## **n Remote control (steering wheel switches)**

The audio system can be operated using the remote control located on the steering wheel.



- 1** Power on/change mode: press  
Power off: press and hold
- 2** Volume
- 3** Radio: radio tuner  
CD: CD/track/file (MP3/WMA) select

## Air Conditioning System (without navigation system)

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".



- |                                      |   |
|--------------------------------------|---|
| 1 Driver side temperature control    | 8 Micro dust and pollen filter              |
| 2 Switch to automatic mode           | 9 Passenger side temperature control        |
| 3 Driver side temperature display    | 10 Windshield defog/defrost                 |
| 4 Off button                         | 11 Outside air/recirculated air mode switch |
| 5 Fan speed controls                 | 12 Air conditioning switch                  |
| 6 Air flow controls                  | 13 Dual mode switch                         |
| 7 Passenger side temperature display |   |

### n Using the automatic mode



- 1 Press the "AUTO" button.
- 2 Adjust the temperature using the "TEMP" buttons.

### n Adjusting the temperature in dual mode



In dual mode, driver and passenger side temperature settings can be adjusted separately.

- 1 Press the "DUAL" switch.
- 2 Adjust the driver side temperature using the "TEMP" buttons, and the passenger side temperature using the "PASSENGER TEMP" buttons.



## Garage Door Opener


The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.



The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

### n Programming HomeLink®

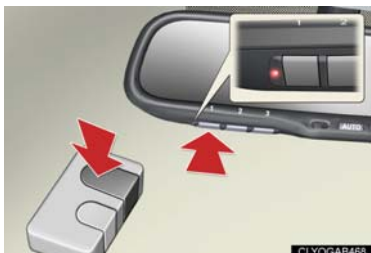

- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.
- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the training button on the motor-head unit in your garage.
- 5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.  
If the door does not open, press and release the same button once again.

## n Programming other devices

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

## n Operating HomeLink®



Press the appropriate HomeLink® button.  
The indicator light should come on.

## Ashtrays



### ► Front

To remove the ashtray, push the release lever.



### ► Rear

To remove the ashtray, press down on the plate and lift the ashtray out.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## Seat Heaters



### ► Seat heaters

Turn the dial toward **1**.

## Console Boxes



### ► Front

To open, slide and lift the armrest with the knob pulled up.



### ► Overhead

To open, press in the overhead console.

There is a power outlet located in the front console box.



Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...

Customizing Your Lexus





## Glove Box

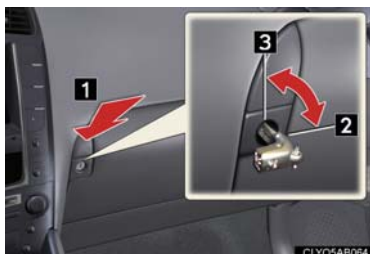

**1** Opens: press the button.

**2** Locks

**3** Unlocks

The glove box can be locked and unlocked using the mechanical key.

## Cup Holders



► **Front (press-in type)**

To open, press down on the front of the lid.



► **Front (slide type)**

To open, pull and hold the knob and slide the armrest.



► **Rear**

To open, press in and release.

## Interior Lights



### ► Without moon roof

- 1 Door position on/off
- 2 On/off



### ► With moon roof

- 1 Door position on/off
- 2 On/off

## Compass



To display the compass, press and hold the "AUTO" button for 3 or more seconds.

To cancel the display, press and hold the "AUTO" button again for 3 or more seconds.



## Trunk Storage Extension

Longer items can be loaded in the vehicle by utilizing the trunk space and rear seat area.



1 Pull down the rear armrest.



2 Lift up the trunk door cover.



3 Open the inside trunk door from the trunk and load baggage or other items.

## Luggage Mat



Pull the lever upwards when lifting the luggage mat up.



The lever can be hooked on the edge of the trunk.

Entering and Exiting

Before Driving

When Driving

Rain and  
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing  
Your Lexus

